

BURTONSAFES

THE SURE DEFENCE

USER INSTRUCTIONS

CONSORT MKII

LOCK MODEL **CONSORT MKII**



ABOUT CONSORT MKII

The CONSORT MKII has a cash rating of £1,000. An electronic combination lock is used to secure the safe, the code can consist of 1-8 numbers. Other features a basic audit trail facility and a vibration alarm.

A 2-year warranty in respect of materials and workmanship is provided.

OPENING THE SAFE FOR THE FIRST TIME:

- Your safe has been supplied with an external power supply box. Insert the batteries into this box, and then plug the lead into the jack socket on the underside of the safes keypad.
- The safe will run through a short initialisation process, when complete the message 'GOOD' will appear on screen.
- Press the # key to activate the lock.
- Enter the preset user code, which is 1234, and then press the # key. The message 'OPEN' will appear on screen.
- Turn the safes handle in a clockwise direction; your safe will now open.

OPENING THE SAFE:

- Press the # key on the touch screen display to activate the lock.
- Enter your user code, then press the # key. The message 'OPEN' will appear on screen.



SETTING YOUR OWN USER CODE:

- Begin with the safe door in the open position, and the locking bolts retracted.
- Press the # key to activate the lock.
- Enter the preset user code, which is 1234, and then press the # key. The message 'OPEN' will appear on screen.
- Within 7 seconds press the * key
- Input your chosen user code, then press the # key. N.B. You should note that your code is displayed on screen as you are entering it, please take care that no unauthorised persons can see the screen whilst you are inputting your code!
- If you have successfully set you new code then the keypad will emit several short beeps and display the message 'IN'

SETTING THE SECOND USER CODE:

- Begin with the safe door in the open position, and the locking bolts retracted.
- Press the # key to activate the lock.
- Enter the preset second user code, which is 123456, then press the # key. The message 'OPEN' will appear on screen
- Within 7 seconds press the * key
- Input your chosen user code, then press the # key. N.B. You should note that your code is displayed on screen as you are entering it, please take care that no unauthorised persons can see the screen whilst you are inputting your code!
- If you have successfully set you new code then the keypad will emit several short beeps and display the message 'IN'

INCORRECT ENTRY:

- In case of entering an invalid code, an acoustic signal sounds 3 times and screen will display 'ERROR' After three wrong entries an alarm will sound for one minute then the safe will return to standby mode

INSTALLING BATTERIES:

- On the back of the door is a black plastic battery compartment slide the cover of the compartment to the left.
- Install the 4 x AA batteries. Mouldings inside the plastic compartment show the correct direction in which to install all of the batteries.
- Replace the cover of the compartment.

HOW TO CLOSE THE SAFE:

- Push the door shut and turn the handle in an anti-clockwise direction.

OPENING THE SAFE WITH THE EMERGENCY KEY:

- Your safe is equipped with a mechanical override key. This can be used in case of an emergency to override the electronic locking system and open the safe.
- The keyhole is located underneath a rectangular plastic cover just to the right of the LCD display screen. To reveal the keyhole press on the rectangular cover and slide it to the right.
- Insert the override key into the keyhole & turn it anti-clockwise.
- Turn the safes handle in a clockwise direction; your safe will now open.

SETTING DATE AND TIME:

- Press the * key, the date and time will be displayed and the year number will flash.
- Within 3 seconds, and whilst the year is flashing, press number keys to input year (2 digits). The input numbers flash and the year is set automatically. Then it moves to the month.
- Within 3 seconds, and whilst the month is flashing, press number keys to input month (2 digits). The input numbers flash and the month is set automatically. Then it moves to the day.
- Repeat the above procedure in turn for the day, and then for week day, hour and minutes of the time.

TURNING ON THE VIBRATION ALARM:

- Whilst the safe is in standby mode press the 0 key, the screen will show 'ALERT ON'. The alarm is now on.
- If the safe is vibrated or moved an alarm will sound. To cancel this alarm input a valid user code.

TRACK THE OPENING RECORDS OF THE SAFE LOCK

- Press the # key to take the safe out of standby mode.
- Input a valid user code.
- Whilst the screen remains lit blue press the 0 key.
- The screen will display the last user to open the safe (PASS 1 = The first user code, PASS 2 = The second user code).
- The screen will then show the date and time that the safe was opened.
- To check the next record press the 0 key again. You can scroll through the records to see the last 58 openings.
- To scroll backwards through the record log press the 8 key.
- After 10 second of inactivity the safe lock will automatically return to standby mode.

BATTERY STRENGTH INDICATOR



High



Medium



Low

A series of beeps indicates that the battery is weak and must be replaced. Only use **4 x 1.5V Alkaline** batteries!

Burton Safes recommends.....

