

Manual Sun Safe

Modellen: ES 045, ES 065, ES 080, ES 100, ES 150, ES 200, ES 400, ES 700

Possibilities for bolt-down:
These safes can be bolted-down to the floor.



Opening the safe for the first time

Push the start button. On the screen you will see six bars "_____".

Now enter the pre-set factory code 1 2 3 4 5 6.
On the screen you will see "open".

Turn the knob to the right and turn the handle upwards before the word "open" disappears.

Please note you have to change the pre-set factory code after the you have opened your safe for the first time.

How do I set a second code?

Enter the current code and open the door.
On the inside of the door you will find a black cover.
Open this cover.
Behind this cover is a white memory button.
Press the memory button once.
Now press 2 followed by the start button.

Now enter your new 6-digit code.
On the screen you will see **AGAIN IN**.
Enter your new 6-digit code again.
Now you will see **IN1** which confirms your new code has been set.

How do I change the code in the lock?

Current (factory) code

Enter the current (factory) code and open the door.
On the inside of the door you will find a black cover.
Open this cover.

Behind this cover is a white memory button.
Press the memory button once.

On the screen you will see "-Code-" followed by "USEr_".
Now press 1 followed by the start button.
Now you will see six bars "- - - - -".

Now enter your new 6-digit code.
On the screen you will see **AgAiN**.
Enter your new 6-digit code again.
Now you will see **IN_1B** which confirms your new code has been programmed.

How do I hide the code on the screen?

Press the start button twice.
Now enter your code. The code will not be visible on the screen.

How do I turn the sound of the lock on or off?

Enter the current code and open the door.
On the inside of the door you will find a black cover.
Open this cover.
Behind the cover you will see a white memory button.
Press this button for 3 seconds.
On the screen you will see the word "beep".
Next the screen will show "On-OFF".

Press **0** followed by **start** to turn **on** the sound.
Press **1** followed by **start** to turn **off** the sound.

Manual Sun Safe

Modellen: ES 045, ES 065, ES 080, ES 100, ES 150, ES 200, ES 400, ES 700

How do I lock the keypad?

Press the start button for 3 seconds.
On the screen you will see "Act".
The keypad is now locked.

How do I unlock the keypad?

Press the start button for 3 seconds.
On the screen you will see "deAct".
The keypad is now unlocked.

When do I have to change the batteries?

- When the screen shows "Lo_bAt"
- When the door of the safe will not open and you have entered the right code en the screen shows "OPEn"
- When you have entered the right code and the screen shows "good" and you hear a beep twice
- When the screen will not turn when when you press the start button

How do I change the batteries?

Enter the current code and open the door.
Under the keypad you will find a hook on the battery cover (see picture at the beginning of the manual).
Pull the hook towards you and remove the battery cover.
Now you will have access to four batteries which you can replace now with new ones.
We advice to use four Alkaline batteries from the brand Duracell.
These batteries have enough voltage for the lock.

Please do not use rechargeable batteries!

Always check if the lock works correctly before closing the door.

Frequently asked questions

Problem	Pausable cause	Solution
No reaction when I push the start button	Empty batteries	Change the batteries
	Placed the batteries in the wrong way in the battery holder	Place the batteries in the right way in the battery holder
	The key pad is locked	Push the start button for 3 seconds to unlock the keypad again
	Circuit error	Contact the store where you have bought your safe
The screen shows "Err-03"	You have entered the wrong code	Enter the right code
The alarm goes off and the safe will not open	You have entered the wrong code 5 times	Enter the right code and wait for 3 minutes until the alarm stops
The green light in on, but the safe will not open. The screen shows "OPEn"	The batteries are almost empty	Change the batteries
	The key has not been turned yet	Turn the key clockwise
	Mailfunction in the lock	Contact the store where you have bought your safe
I can not change my code	The time frame to change your code has passed	Enter your new code within the time frame of 5 seconds
	The panel does not work	Contact the store where you have bought your safe
	The keypad does not work	Contact the store where you have bought your safe
The screen shows "Lo_bAt"	The batteries are almost empty	Change the batteries
The screen shows "Act"	The keypad is locked	Press the start button for 3 seconds to unlock the keypad
I forgot my code		Contact the store where you have bought your safe
I can not find the key anymore		Contact the store where you have bought your safe