




5412EURD P35956

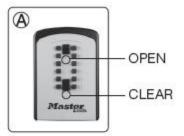

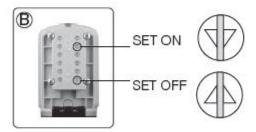

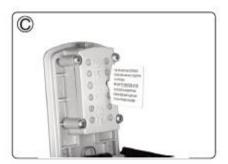









(GB)

## Opening the key storage compartment door (A)

- 1. Before trying to enter your code, always press down the "CLEAR" button, to return all the buttons to their original settings.
- 2. Enter your code and press down "OPEN" button.
- 3. If you have entered an incorrect combination, push down the "CLEAR" button to return the buttons to their original settings, then enter your combination

# Closing the key storage compartment door (A) 1. Press down the "CLEAR" button

- 2. Enter your combination, press down and hold the "OPEN" button until you close the door
- 3. Once the door is closed, release the "OPEN" button

To set a combination (B)(C)
Note that each number in a combination can only be used once.

- 1. There's no pre-set combination, press down the "CLEAR" button and the "OPEN" button.
- 2. Open the compartment door and take the white card which is a change tool (to use like a screwdriver) to set combination
- 3. Behind the door, there are 12 screws (numbered from 0 to 9 and letters A and B) with an arrow. All arrows are set to the "SET OFF" position
- 4. Use the change tool to turn the numbers you selected (to the left or right) by 180° (1/2 turn) to the "SET ON" position

## Your combination is now set, be sure to record it in a safe location

## To hang wall mount model:

- 1. Open the compartment door (see instructions above)
- 2. Position the lock on the desired surface
- 3. Use level to verify the lock is vertical
- 4. Mark the position of the screw holes on the surface
- 5. Remove lock
- 6. Drill holes
- 7. If necessary, use hammer to place anchors
- 8. Position lock, insert thermoplastic cover flaps behind lock
- 9. Insert and tighten screws
- 10. Close the door, position thermoplastic cover on safe for greater weathertough protection