



1. Opening your safe for the first time / Override key

Remove the grey plastic plug at the bottom of the keypad (1) insert one of your emergency keys into the lock, turn anticlockwise. Whilst holding the key in position, turn the handle to open your safe.

2. Batteries

The safe requires 4 x AA alkaline batteries (Not supplied). Insert these into the battery compartment on the back of the door. This can be accessed by removing the screw on the panel, using the Allen key provided. When the batteries are low a red indicator light will illuminate and they should be changed as soon as possible.

3. Closing the safe/ setting personal code

Shut the safe door and enter a 4 digit code followed by #, now turn the handle into the locked position. Your code is now stored.

4. Opening the safe using the personal code

To unlock- input your user or master code and press # to confirm. When the green light is on, turn the handle (2) anticlockwise and open the door.

5. Changing the Master code

With the door in the open position press 00 then # or *. The yellow light will display, input any 3-8 digit code and press # or * to confirm. You will hear one beep and the green light will display, which indicates the master code is successfully set.

Installation

Use the two 6mm bolts to fix your safe to a suitable wall/floor.

GUARANTEE REGISTRATION

Please submit your guarantee registration by visiting our website www.phoenixsafe.com and clicking on guarantee registration.

For further assistance or information please contact us on 0151 944 6444.

APEX HOUSE, 1 ORRELL MOUNT, LIVERPOOL, L20 6NS, UNITED KINGDOM | +44 (0)151 944 6444