

# KL10 Installation and Operating Instructions



#### **SPECIAL NOTES**

#### Please read carefully:

- Before installing the lock, familiarise yourself with the installation and operating instructions.
- The factory preset combination is 0-0-0-0.
- Your KitLock is supplied ready to fit to doors up to 19mm (3/4") thick.

 
#### FITTING INSTRUCTIONS

The KitLock can be fitted to cabinets, cupboards and lockers etc. as a direct replacement for existing cam locks. It can also be fitted easily to cupboards and cabinets that do not have an existing locking device.

#### Fixing Pack A Default Supply




3 Straight cam x 1
4 Screw x 1



#### Fixing Pack B Optional Additional Fixings

1 Metal Clip x 1 2 Screws x 2

 Washer x 1
Crank Cam x 1



#### **INSTALLATION GUIDE**

# A Replace existing cam lock with KitLock

Step 1 Remove existing cam lock.

Step 2 Fit the KitLock to the door, passing the spindle through the existing hole.

Step 3 Now secure the lock by threading the hex nut onto the spindle.

Step 4 Fit cam and secure with screw.

Step 5 Now check the operation of the lock using the factory preset combination 0-0-0-0.

Step 6 If the lock is functioning correctly, change the code using the instructions overleaf.

# B New Installation

N.B. Optional Fixing Pack B (above) may be required.

Step 1 Mark a position at a suitable distance from the door edge, ensuring enough clearance for the cam to work.

Step 2 Using the 'Typical Door Prep.' dimensions (see overleaf), drill a hole to suit..

Step 3 Continue installation from step 2 to 6, left.

#### **CHANGING THE CODE**

- With the indicator in the open position, turn the dials to the factory preset combination 0-0-0-0.
   Note: If you have already changed the code, use your current combination for this step.
- **2** Depress the Reset Button fully and hold, turn the dials to your desired combination.

**Note:** Do not let go of the Reset Button while setting your combination.

**3** Release the Reset Button after checking your combination is correct.

**Note:** The outer casing will turn freely between the open and locked position until the combination has been scrambled.

# **HOW TO USE YOUR LOCK**


- 1 Once you have chosen and set your combination, turn the outer casing so the indicator is in the locked position.
- 2 Make a note of your chosen combination and scramble the dials. The lock is now locked.
- **3** To reopen, rotate the dials to your chosen combination and turn the outer casing so the indicator is in the open position.

**Note:** Your chosen combination will continue to operate the lock until it is changed.

### **FINDING THE CODE**


Note This function requires the Master Key (sold separately).


- 1 Insert the Master Key when the indicator is in the locked position.
- **3** Gently rotate each dial upwards until it stops. This is your code.
- 2 Turn the key clockwise 90 degrees.
- **4** Turn the Master Key anticlockwise 90 degrees and remove.

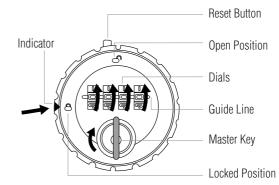


#### **DIMENSIONS**

#### **KL10**

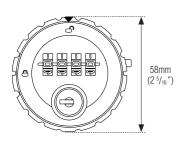

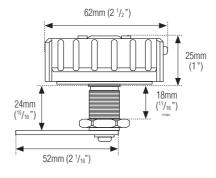

# Typical Door Prep.

 

# CODELOCKS UK HEADQUARTERS

Tel: +44 (0) 1635 239645 Fax: +44 (0) 1635 239644 sales@codelocks.com www.codelocks.com Helpline, service & spares Freephone: 0800 393 405

#### CODELOCKS INC US

Tel: +1 714 979 2900 Fax: +1 714 979 2902 sales@codelocks.us www.codelocks.us Helpline, service & spares Toll free: 1.877.codelock

#### CODELOCKS (Australia) PTY LTD

Tel: +61 2 9882 1009
Fax: +61 2 9882 6030
sales@codelocks.com.au
www.codelocks.com.au
Helpline, service & spares
Toll free: 1800 052 131

