

Secure Paper & Media Cooler

- Owner's manual for SecureLine Paper and Media Coolers
- Montage - und Bedienungsanleitung SecureLine Paper und Media Coolers
- Manuel de l'utilisateur pour SecureLine Paper et Media Coolers
- Manual de usuario para SecureLine Paper y Media Coolers
- Manuale d'uso per SecureLine Paper e Media Coolers
- Gebruikershandleiding voor SecureLine Paper en Media Coolers
- Gratis användarmanual för SecureLine Paper och Media Coolers
- Руководство пользователя для сейфов категории SecureLine Paper и Media Coolers

Secure Paper & Media Cooler



PC-14



PC-33



MC-33

English _____ page 03

- **Note:** Keep this document in a secure place away from the fire safe, and write your key number registration on the last page of this manual.

Deutsch _____ Seite 06

- **Hinweis:** Bewahren Sie diese Anleitung an einem sicheren Ort und nicht in direkter Nähe des Feuersafes, und schreiben Sie Ihre Schlüsselnummerregistrierung auf die letzte Seite der Bedienungsanleitung.

Français _____ page 09

- **Note:** Conservez ce document en lieu sûr, à distance du caisson ignifuge, et notez le numéro d'immatriculation de votre clé à la dernière page de ce manuel.

Español _____ página 12

- **Nota:** Guarde este documento en un lugar seguro fuera del contenedor, y escriba su número de registro de referencia en la última página del manual.

Italiano _____ pagina 15

- **Nota:** conservare questo documento in un luogo sicuro lontano dalla cassaforte ignifuga, e riportare il codice numerico sul retro del presente manuale.

Nederlands _____ pagina 18

- **Noot:** Houdt dit document op een veilige plaats buiten de brandwerende box, en noteer uw sleutelnummer op de laatste pagina van deze handleiding.

Svenska _____ sida 21

- **Notera:** Förvara detta dokument på ett säkert ställe långt från brandskyddskåp och skriv det inskrivna nyckelnumret på den sista sidan i denna manual.

Русский _____ страница 24

- **ВНИМАНИЕ:** Держите эти документы в безопасном месте подальше от сейфа, и запишите ваш шифр на последней странице этого руководства.

Dear Customer,

Congratulations on the purchase of your SecureLine security product.

We would like to thank you for expressing your confidence in our product through your choice.

Your SecureLine fire safe will help protect your valuables against the rising tide of crime and help prevent the loss of possessions with a high sentimental value.

This manual contains the information required to achieve maximum benefit from your fire safe. We recommend that you read the entire manual carefully. After all, you cannot be too careful when it comes to protecting your property.

We wish you many years of security!

What have you received?

Please check carefully that you have received the following items. If not, please contact your supplier.

For Secure Paper Cooler:

- 2 keys and key number registration leaflet.
- User manual.

Additional for model PC-33:

- Hanging folders for A4 documents.

Additional for Secure Media Cooler:

- Cart plus assembly kit (metal railings, corner pieces with wheels, screws and nuts).
- Fire insert.

Note: only store data media inside the compartment, do not store items on top of the insert.

What can you store in this fire safe?

For Secure Paper Cooler paper documents e.g.:

- Cash
- Cheques
- Passport, driving licence, birth certificates
- Insurance documents

For Secure Media Cooler data media e.g.:

- Credit cards
- CDs and DVDs
- Data and video tapes
- Microfilm

* A Tip:

Some insurers appreciate it if you store your valuable property in a good fire safe. Therefore ask your insurance company what effect this will have on your premium. The high quality security offered by your fire safe can make a significant difference.

Opening and closing the safe

Please check that the safe works correctly before installing it or securing items inside.

Opening

- Insert one of the keys supplied in the keyhole (Figure A).

Note: the key only fits the keyhole in one position: do not force it!

- Turn the key anti-clockwise (left) until it stops. Do this gently.
- Pull up and out the steel latch (Figure B). The grip moves upwards and unlocks.
- Flip the lock fastening out and downwards (Figure C).
- Open the lid.

For Secure Media Cooler only:

- Remove the top of the fire insert (Figure D).

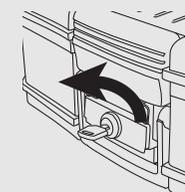


Figure A

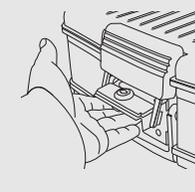


Figure B

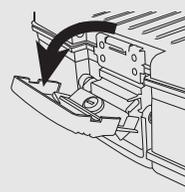


Figure C

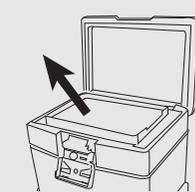


Figure D

Closing

For Secure Media Cooler only:

- Close the compartment by placing the top back onto the fire insert (Figure E).
- Flip the lock mechanism up and place the grip back properly (Figure F).
- Press the steel latch down to lock the grip (Figure G).
- Insert one of the keys supplied in the keyhole.

Note: the key only fits the keyhole in one position: do not force it!

- Turn the key clockwise (right) until it stops. Do this gently (Figure H).
- Now remove the key from the keyhole and store it safely away from the fire safe.

Attention

- **Do not store the manual and keys in the fire safe, but safely away from the fire safe.**



Figure E

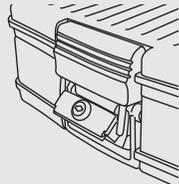


Figure F

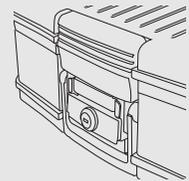


Figure G

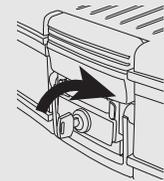



Figure H

Assembling the wheel cart

For Secure Media Cooler only:

- Slide long metal railings (A) into corner pieces with wheels.
- Line up holes located on metal railing (A) and corner pieces with wheels (B).
- Put the screws (8) into holes and attach nuts (8) (do not tighten).
- Slide short metal railings (C) into corner pieces (B) with wheels.
- Put screws (8) into holes and attach nuts (8) (do not tighten).
- Now tighten all screws and nuts.
- When finished, place the fire safe carefully on to the wheel cart.

Note: The wheel cart can only support a limited amount of weight, do not sit or stand on the wheel cart.

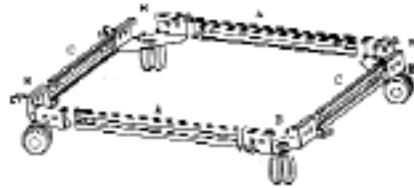

Maintenance

- Never throw your keys. Distortion of the key can damage the lock.
- When closing the lid, there should never be anything between the lid and the fire safe (e.g. a paper clip).
- Do not fill the fire safe to such an extent that it is hard to close the lid. The locking mechanism could then seize up as a result of pressure on the inner plate.
- The outside of your fire safe can be cleaned with a slightly damp cloth. Never use chemical cleaning agents.

Troubleshooting

Although your fire safe has been manufactured with the greatest care, a fault may nevertheless occur, such as:

- The locking mechanism does not work.
- You cannot open your fire safe.
- Faulty lock.
- You lose your key.

The most important rule is not to try and force anything. First re-read the manual. If you cannot find a solution, contact your supplier.

Standard Warranty terms

1. All claims under the warranty must be accompanied by proof of purchase.
2. Claims under the warranty must be made to the dealer from which the unit was purchased.
3. The warranty applies only to the initial purchaser and is not transferable.
4. The warranty does not apply in the event of damage or faults which are the result of:
 - a) Accidents, misuse, wear and tear, neglect, wilful damage, fire and or malicious attack.
 - b) Incorrect installation and/or use in a manner which conflicts with the relevant legal, technical and/or safety standards.
 - c) An unauthorised modification.
 - d) Repairs carried out by anyone other than an authorised dealer or the manufacturer.
 - e) Negligent transportation without appropriate packaging or protection.
 - f) The erroneous programming of numerical, combination and/or electronic locks.
5. No claim will be accepted under this warranty involving losses occurring in transit.
6. Batteries and faults caused by incorrect insertion or use of batteries with the wrong voltage are excluded from the warranty.
7. The warranty gives no right to reimbursement of any loss apart from the replacement or repair of the faulty parts. The manufacturer cannot be held liable for any consequential loss or any other consequences caused by or connected with the products supplied by it, including loss or damage to items stored in it by theft, fire, water ingress, condensation, chemical attack or other means.
8. The costs of shipping, packing and shipping insurance will always be borne by the customer.
9. Only the manufacturer may amend the conditions of this warranty.
10. Repairs or site visits that are not covered under this warranty will be chargeable. Please first clarify with your dealer whether your claim is covered by warranty.

In the unlikely event of a fault developing, please contact your supplier.